



# Felco Gartenschere - Pruners Disassembly

They can be easily disassembled and replace all parts. The blade can be sharpened and greased.

Written By: VauWeh



## INTRODUCTION

These scissors need a little maintenance. The blade needs to be sharpened, removes rust and joint lubrication.

---



### TOOLS:

- [Gabelschlüsselset](#) (1)
-

## Step 1 — Different types available



- There are different types - for example, also for left-handers, here a Felco # 2 is shown.

## Step 2 — Release nut



- First, the upper nut SW 13 is released, then the gap is reversed.
- The spring can be easily taken out.



### Step 3 — Loosen the screw from below



- Now the pivot screw can be unscrewed. Here, the SW 14 is used
- Next to it is the spring and the lock nut.
- Now, the scissors can be completely disassembled. The blade is pinned with three bolts in the handle half and dissolves most easily.

### Step 4 — The items



- The gap is dismantled. We see the joint nut, guide screw, the spring, the two handles and the blade.

## Step 5 — maintenance



- The blade is ground on one side. The bevel edge is approximately 15 degrees with sharpening, the straight edge deburring with more than 5 degrees.
- The parts should be freed from rust and freshly oiled or greased.

---

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.

This document was last generated on 2017-07-27 03:20:19 PM.